

PARTS LIST

Part	Description	Qty	Part	Description	Qty
1	Outer Flange	1	29	Anti-dust Ring	1
2	Inner Flange	1	30	Bearing 608	1
3	Protect Guard	1	31	608 Bearing Sleeve	1
4	Hex Screw M5X16	1	32	Wind Guard	1
5	Front Cover	1	33	Screw ST5X70F	2
6	Anti-dust Cover	1	34	Stator Assy	1
7	Spindle	4	35	Housing	1
8	Key 4X5X Φ 13	4	36	Screw ST4.2X10F	5
9	Bearing 6202	1	37	Brush Cover	2
10	6202 Bearing Cover	1	38	Carbon Brush	2
11	Screw M4X10	1	39	Screw ST4X12F	2
12	Wheel Gear	1	40	Screw ST4X10F	2
13	Circlip 14	1	41	Brush Holder	2
14	Needle Bearing	1	42	Electric Ring	2
15	Side Handle	3	43	Screw ST4.2X18F	2
16	Screw ST50X40F	1	44	Right Rear Handle	1
17	Spindle Lock	1	45	Left Rear Handle	1
18	Lock Spring	1	46	Switch	1
19	Circlip 6	1	47	Capacitor	1
20	Bumper	4	48	Revolving Button Spring	1
21	Gear Box	1	49	Revolving Button	1
22	Fixing Screw M8	1	50	Screw ST4X14F	1
23	Pinion Gear	1	51	Cable Clamp	1
24	Bearing 6201	1	52	Cable Protector	1
25	6201 Bearing Cover	1	53	Cable and Plug	1
26	Spring Washer 4	1	54	Hex Spanner	1
27	Screw M4X12	1	55	Spanner	1
28	Rotor Assy	1			

ASSEMBLY DIAGRAM

