

PARTS LIST

Part	Description	Qty	Part	Description	Qty
1	Outer Flange	1	28	Anti-dust Ring	1
2	Inner Flange	1	29	Bearing 6200-2Z	1
3	Protect Guard	1	30	6200 Bearing Sleeve	1
4	Spindle	1	31	Wind Guard	1
5	Key4*4*20	1	32	Screw ST4.8X70F	2
6	Dust Cover	1	33	Stator Assy	1
7	Screw M5X16	4	34	Housing	1
8	Spring Washer 5	4	35	Brush Cover	2
9	Front cover	1	36	Brush Cover	2
10	Bearing 6203-2Z	1	37	Carbon Brush Cover	2
11	Front Bearing Cover	1	38	Brush	2
12	Spring Washer 4	7	39	Brush Holder	2
13	Screw M4 X10	7	40	Electric Ring	2
14	Wheel Gear	1	41	Left Handle	1
15	Circlip 17	1	42	Capacitor	1
16	Bearing 609-2Z	1	43	Switch	1
17	Gear Box	1	44	Screw ST4.2X40F	2
18	Screw ST4.8X35F	4	45	Screw 4.2X14F	3
19	Spindle Lock	1	46	Right Handle	1
20	Lock Spring	1	47	Screw 4.2X14F	2
21	Circlip 9	1	48	Cable Clamp	1
22	Anti-Dust Cap	1	49	Cable Protector	1
23	Nut M8	1	50	Cable and Plug	1
24	Pinion Gear	1	51	Side Handle	1
25	Bearing 6301-2Z	1	52	M8 Hex Wrench	1
26	6301 Bearing Cover	1	53	Spanner	1
27	Rotor Assy	1			

ASSEMBLY DIAGRAM

