

PARTS LIST

NO.	Part name	QTY	NO.	Part name	QTY
1	Outer Flange	1	26	Creepage retaining ring	1
2	Inner Flange	1	27	Bearing 607	1
3	Protect Guard	1	28	607 Bearing Sleeve	1
4	Spindle	1	29	Wind Guard	1
5	Dust Cover	1	30	Rubber column	2
6	Screw M4 X14	4	31	Screw ST4.2X14	4
7	Front cover	1	32	Screw ST4.2X22	2
8	Bearing 6201	1	33	Right Handle	1
9	Bearing Cover	1	34	Housing	1
10	Screw M4×10	3	35	Stator Assy	1
11	Wheel Gear	1	36	Screw ST3x8	4
12	Needle Bearing	1	37	Carbon Brush	1pair
13	Gear Box	1	38	Carbon Brush Cover	2
14	Screw ST4.2X25F	4	39	Brush Holder	1pair
15	Lock Pole	1	40	Electric Ring	1pair
16	Spindle Lock	1	41	Governor	1
17	Spring Φ8	1	42	Capacitor	1
18	Sponge	1	43	Switch	1
19	Nut M7	1	44	Cable and Plug	1
20	Pinion Gear	1	45	Cable Clamp	1
21	Rectangular Ring	1	46	Cable Protector	1
22	Bearing 608	1	47	Left Handle	1
23	608 Bearing Sleeve	1	48	Screw ST4.2x10	2
24	Screw M4 X10	2	49	Side Handle	1
25	Rotor Assy	1	50	Spanner	1

ASSEMBLY DIAGRAM

