

PARTS LIST

NO.	Part name	QTY	NO.	Part name	QTY
1	Outer Flange	1	26	Bearing 607	1
2	Inner Flange	1	27	Bearing Sleeve	1
3	Protect Guard	1	28	Wind Guard	1
4	Spindle	1	29	Rubber column	2
5	Dust Cover	1	30	Screw ST4.2X14	4
6	Screw M4×14	4	31	Screw ST4.2X20	2
7	Front Cover	1	32	Right Handle	1
8	Bearing 6201	1	33	Housing	1
9	Bearing Cover	1	34	Stator Assy	1
10	Screw M4X10	3	35	Screw ST3x8	4
11	Wheel Gear	1	36	Carbon Brush	1pair
12	needle Bearing HK0709 Φ11xΦ7x9	1	37	Carbon Brush Cover	2
13	Gear Box	1	38	Brush Holder	1pair
14	Screw ST4.2×22	4	39	Electric Ring	1pair
15	Circlip 6	1	40	Speed controller	1
16	Lock Spring	1	41	Capacitance	1
17	Spindle Lock	1	42	Switch	1
18	Sponge	1	43	Cable Clamp	1
19	Nut M6	1	44	Cable and Plug	1
20	Pinion Gear	1	45	Cable Protector	1
21	Bearing 608	1	46	Left Handle	1
22	Gear Box Cover	1	47	Screw ST4.2x10	2
23	Screw M4 X10	2	48	Spanner	1
24	Rotor Assy	1	49	Side Handle	1
25	Creepage retaining ring	1			

ASSEMBLY DIAGRAM

