

PARTS LIST

Part	Description	Qty	Part	Description	Qty
1	Anti-heat Cover	1	24	Wind Guard	1
2	Collet Nut	1	25	Tapping Screw ST4.2×65F	2
3	Collet $\Phi 6.35$	1	26	Screw position locker	2
4	Lock Spring	1	27	Stator Assy	1
5	Tighten Sleeve	1	28	Housing	1
6	Spindle	1	29	Insulate Plate	2
7	Bearing 61901-2Z	1	30	Carbon Brush	2
8	Circlip 12	1	31	Tapping Screw ST3×8	2
9	Gear Box	1	32	Brush Holder	2
10	Pan Screw ST4.2x25	4	33	Electric Ring	2
11	Rubber Ring	1	34	Cable Clamp	1
12	Bearing 6001-2Z	1	35	Cable Protector	1
13	Circlip 28	1	36	Cable and Plug	1
14	Lock Spring	1	37	Tapping Screw ST4.2×16	1
15	Connet Pole	1	38	Rear Cover	1
16	Circlip 26	1	39	Electronics	1
17	Bearing 6000-2RZ	1	40	Switch	1
18	O ring	1	41	Capacitor	1
19	Middle Aluminum Cover	1	42	Switch Connect Pole	1
20	Rotor Assy	1	43	Switch Button	1
21	Dust Ring	1	44	Spanner 17	1
22	Bearing 607-2Z	1	45	Spanner 12	1
23	Bearing Sleeve	1			

ASSEMBLY DIAGRAM

