

PARTS LIST

Item No.	Part Name	Q'ty	Item No.	Part Name	Q'ty
1	Screw M8x12	1	26	Plastic Housing	1
2	Outside Flange	1	27	Brush Holder	2
3	Spindle	1	28	Carbon Brush	2
4	Rubber Casing	1	29	Lug	2
5	Circlip for Shaft 26	1	30	Switch	1
6	Spline Spring Washer	1	31	Cord Clip	1
7	Bearing 6000	1	32	Screw ST4.0x14	2
8	Block of Toggle	1	33	Spring	2
9	Bronze Bush	1	34	Screw ST4.0x20	2
10	Screw ST4x27	4	35	Switch holder	1
11	Reducer	1	36	adjustable-switch	1
12	Circlip for Shaft 5	1	37	Back Housing	1
13	Bearing 625	1	38	Screw ST4.0x10	1
14	Sealing Washer	2	39	Screw ST4.0x16	2
15	Middle Cover	1	40	Rubber Sleeve	1
16	Bearing 608	1	41	Cord	1
17	Block of Balance	1	42	Inductor	2
18	Armature	1	501	Scraping	1
19	Bearing 607	1	502	Saw blade, Wood	1
20	Rubber Bush	1	503	Set square	3
21	Guide Wind Circle	1	504	Sand paper	1
22	Screw ST4.0x50	2	505	Inner hexagon spanner	1
23	Stator	1	506	Inner hexagon spanner(little)	1
24	Pull Brace	1	507	hose noozles hose connection dust extractor	1
25	Link Pale	1	508	semicircle saw blade	1

ASSEMBLY DIAGRAM

