

PARTS LIST AND DIAGRAM

Please read the following carefully the manufacturer and/or distributor has provided the parts list and assembly diagram in this manual as a reference tool only. Neither the manufacturer or distributor makes any representation or warranty of any kind to the buyer that he or she is qualified to make any repairs to the product, or that he or she is qualified to replace any parts of the product. In fact, the manufacturer and/or distributor expressly states that all repairs and parts replacements should be undertaken by certified and licensed technicians, and not by the buyer. The buyer assumes all risk and liability arising out of his or her repairs to the original product or replacement parts thereto, or arising out of his or her installation of replacement parts tz

Part	Description	Qty.	Part	Description	Qty.
1	inductor	2	19	deep groove ball bearing 6001RS	1
2	stator	1	20	aluminium plate	1
3	deep groove ball bearing -607RS	1	21	screw ST3.9X12	4
4	carbon brush	2	22	balance block	1
5	brush box	2	23	washer M4	1
6	PCB	1	24	screw M4X12	1
7	rotor	1	25	plate set	1
8	deep groove ball bearing 608RS	1	26	spring washer M4	1
9	fan	1	27	screw M4X6	6
10	vibration holder	1	28	screw ST3.9X17	11
11	left housing	2	29	right housing	1
12	wind fender	1	30	switch push button	1
13	wool felt	1	31	switch	1
14	washer	1	32	capacitor	1
15	press steel wire	2	33	terminal block	1
16	cover of steel wire	2	34	cord sleeve	1
17	washer of shaft	2	35	cord&plug	1
18	washer of insulated paper	1	36	dust bag assemble	1

ASSEMBLY DIAGRAM

