

### PARTS LIST AND DIAGRAM

Please read the following carefully the manufacturer and/or distributor has provided the parts list and assembly diagram in this manual as a reference tool only. Neither the manufacturer or distributor makes any representation or warranty of any kind to the buyer that he or she is qualified to make any repairs to the product, or that he or she is qualified to replace any parts of the product. In fact, the manufacturer and/or distributor expressly states that all repairs and parts replacements should be undertaken by certified and licensed technicians, and not by the buyer. The buyer assumes all risk and liability arising out of his or her repairs to the original product or replacement parts thereto, or arising out of his or her installation of replacement parts tz

Part	Description	Qty.	Part	Description	Qty.
1	screw ST3.9X17	7	20	spring washer φ5	1
2	right housing	1	21	screw M5X16	1
3	inductor	2	22	clip	1
4	stator	1	23	plate	1
5	right wind fender	1	24	spring washer φ5	4
6	screw ST2.9X8	1	25	screw M4X12	4
7	deep groove ball bearing	1	26	left housing	1
8	brush box	2	27	left wind fender	1
9	carbon brush	2	28	screw ST2.9X8	1
10	rotor	1	29	washer	1
11	deep groove ball bearing	1	30	dust outlet	1
12	switch	1	31	steel wire of dustbag	1
13	switch cover	1	32	dust bag	1
14	fan	1	33	PCB	1
15	washer φ10xφ16xφ0.8	1	34	screwST3.9X12	1
16	balance block	1	35	cord clip	1
17	bearing holder	1	36	cord sleeve	1
18	deep groove ball bearing	1	37	cord&plug	1
19	washer φ15.5xφ16xφ1.5	1			

### ASSEMBLY DIAGRAM

